

CHANGE TIME ON PANASONIC TELEPHONE SYSTEMS: KXTD308, KXTD816, KXTD1232, KXTD500 (-2 or newer only)

1. Use the main telephone on the system (generally et 101), make sure the telephone is an LCD display set. Extension 101 cannot be in use while making the time change, but all other sets will continue to function normally You do not need to lift the handset or press intercom for this program change.
2. Press the PROGRAM KEY
3. Press ** (star, star) and enter the security code 1 2 3 4 (one, two, three, four). The LCD will show: USR-PGM NO?.
4. Press 000 (zero, zero, zero). The LCD will show: "000 DATE/TIME".
5. On the LCD display you will see the word, NEXT, press the soft key directly underneath it (NOTE: the SPEAKERPHONE key will also function as the NEXT key) The LCD will show the year and date. Press the NEXT key again. The LCD will show the time with the hour blinking. Enter the correct time
6. Press the AUTO DIAL/STORE key, you will hear a confirmation tone and the AUTO DIAL/STORE key will light up red.
7. Press the HOLD key.
8. Press the PROGRAM key to exit programming mode.