

CHANGE TIME ON PANASONIC TELEPHONE SYSTEMS: KXTDA50, KXTDA 100, KXTDA200

1. Use the main telephone on the system (generally et 101), make sure the telephone is an LCD display set. Extension 101 cannot be in use while making the time change, but all other sets will continue to function normally You do not need to lift the handset or press intercom for this program change.
2. Press the PROGRAM KEY
3. Press ** (star, star) and enter the security code 1 2 3 4 (one, two, three, four). The LCD will show: USR-PGM NO?.
4. Press 000 (zero, zero, zero). Press the ENTER key.
5. Enter the year (00-99). Press SELECT key (AUTO ANS/MUTE key) for the month.
6. Press the right arrow.
7. Enter the date (01-31). Press the ENTER key.
8. Press the NEXT key or (down arrow).
9. Enter the hour (01-12)
10. Enter the minutes (00-59)
11. Select AM or PM. Press the ENTER key.
12. Press the END key (HOLD key functions as the END key while in programming mode).
13. Press the PROGRAM key to exit programming mode.