

## CHANGE TIME ON PANASONIC TELEPHONE SYSTEMS: KXVS50, KXVS75, KXVS100, KXVS200

1. Press the MY MAILBOX key, or press INTERCOM and dial 1 6 5 (one, six, five) if you do not have a MYMAILBOX key.
2. Enter the password for your mailbox.
3. Press #6 (pound, six)
4. Press \* 9 9 8 (star, nine, nine, eight)
5. Enter the password 6800 (six, eight, zero, zero) followed by # (pound)
6. Press 4 (four) for time change.
7. Press 1 (one) to change the time.
8. Enter the new time followed by # (pound).
9. Press 1 (one) for AM or 2 (two) for PM.
10. Confirm the new time setting. Press 1 (one) to change or 2 (two) to accept.